


ILFORD MULTIGRADE 500LE


ADAPTOR KIT FOR THE KAMM 16 INCH ENLARGER

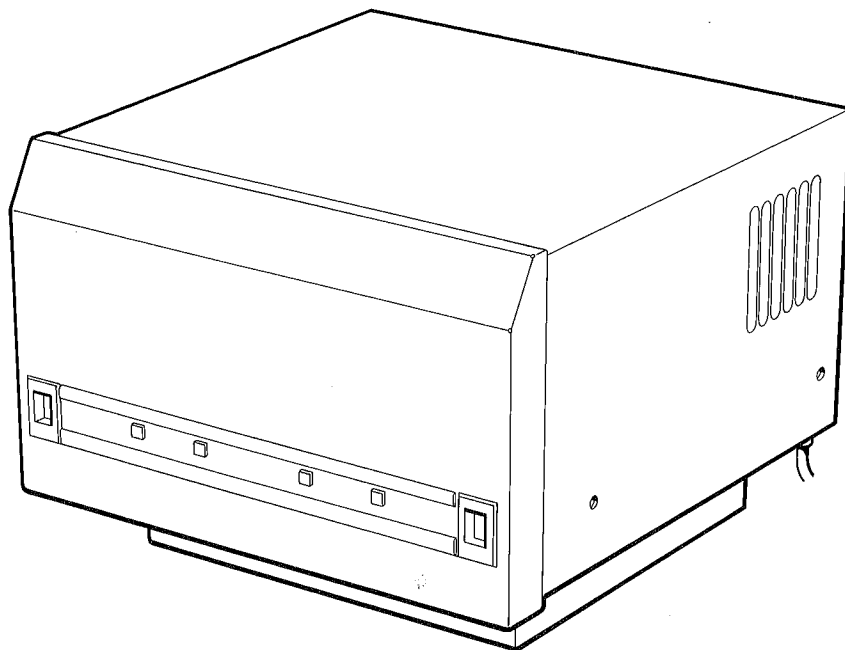

Apply foam rubber strip here, if required.

2

1

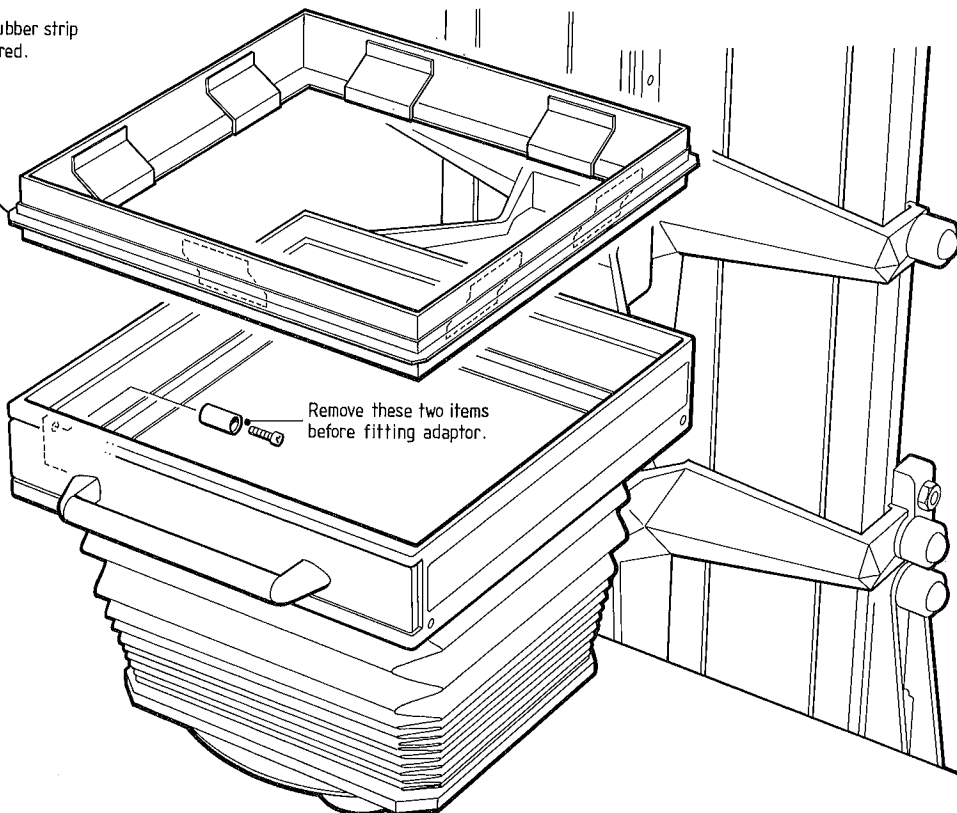

Remove these two items before fitting adaptor.

FITTING INSTRUCTIONS

Parts list

Ref no. on fig	Part no.	Description	Quantity
1	6184-P-003	Adaptor kit, complete	1
2	89014016	Foam sealing strip	2m

Notes for fitting
See figure overleaf.

WARNING

Never lean over counter balanced enlargers; failure of the locking mechanism could cause injury.

- 1 Disconnect the original head from the electrical supply, and lift the head off the enlarger chassis.
- 2 If a separate diffuser sheet is fitted, remove this.
- 3 Remove the spigot (if fitted) from the enlarger chassis, as shown.
- 4 Locate the adaptor in the enlarger chassis, as shown. Ensure the adaptor is orientated with the single guide at the front.

Note

To compensate for manufacturing variations in the enlarger chassis, stick pieces of sealing tape, from the length supplied, to the adaptor, as shown.

- 5 Locate the MULTIGRADE 500HLE enlarger head into the adaptor, as shown.